

Overview

This utility reports the keyboard USB code that is output for each button.
The example shown is for a NavPad


Installation

- Supported O/S : Windows XP or later
- Double-click the .exe file to run the application
- Plug in the keypad to the PC





Operation

Press "Start Test"

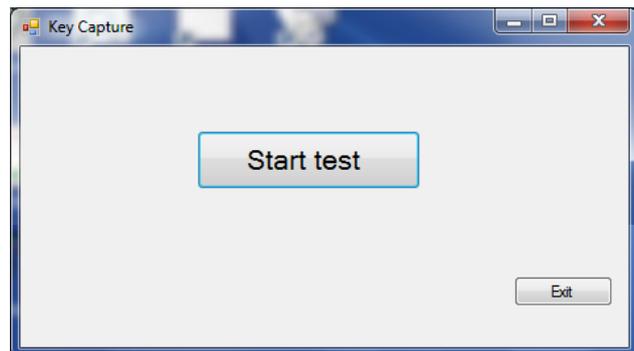

The key capture screen will appear

As you press each key in turn the USB Output Code will appear in the window (listed under Action)

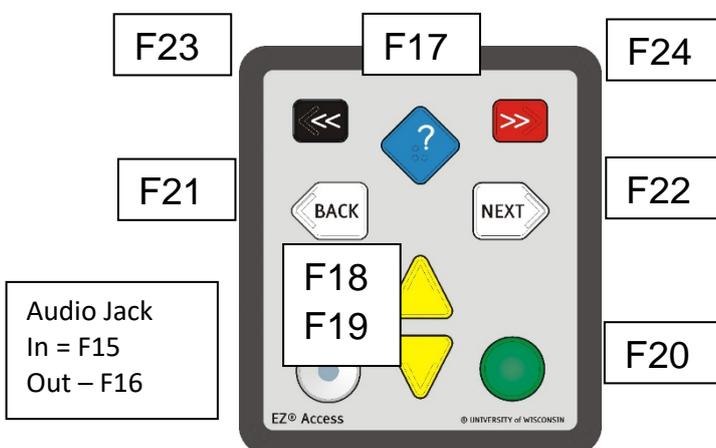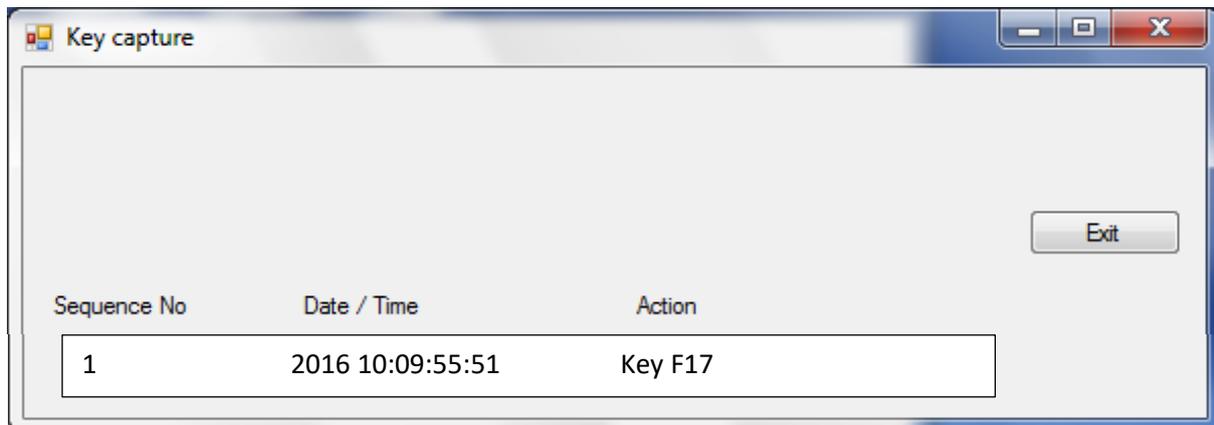

Factory Default outputs are shown here. Where different codes have been allocated (using the configuration software), these changed codes will be reported

The content of this communication and/or document, including but not limited to images, specifications, designs, concepts and information is confidential and is not to be used for any purpose or disclosed to a third party without the express and written consent of Keymat Technology Ltd., Copyright 2015. All rights reserved.